





1

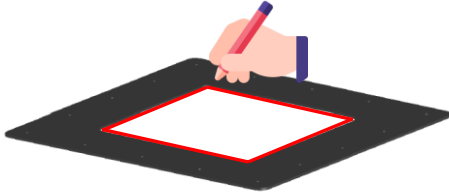


Use the EPDM gasket to mark where the roof hole should be placed,
(Verify before drilling that there is nothing that can be damaged by the impact of the drilling)

2

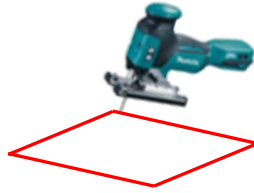

Cut out based on your selection, repeat on the inside.
(Verify before drilling that there is nothing that can be damaged by the impact of the drilling/sawing)

3

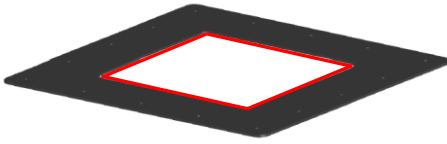

Use EDM packing or sealant as needed

4



5



Mount the Roof-hood with a suitable screw over the gasket or gasket compound

Use the holes that create an even distribution between roof-hood and slab. Cross the screws so that there is an even distribution of pressure so that the gasket/gasket compound is evenly distributed.

Note:
It is the installer's responsibility to ensure that the product is correctly installed and weatherproofed.

Appropriate tools



Dense mass || If necessary



Fasteners || Use appropriate fasteners depending on the roof

