





Assembly Instruction OIG-003 || Cable Entry Wall 3-Compartment

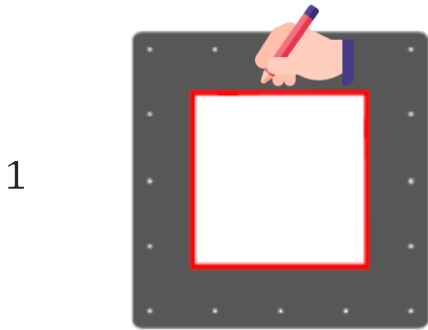


1

Use the EPD'm gasket to mark where the wall hole should be placed,
(Verify before drilling that there is nothing that can be damaged by the impact of the drilling)

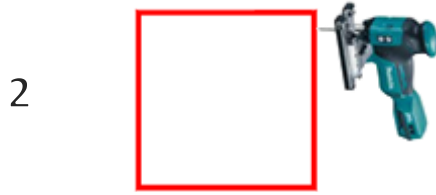


2

Cut out based on your selection, repeat on the inside.
(Verify before drilling that there is nothing that can be damaged by the impact of the drilling/sawing)

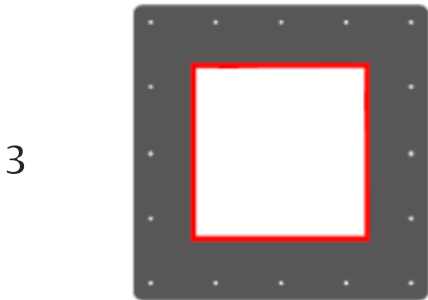


3

Use EDM packing or sealant as needed

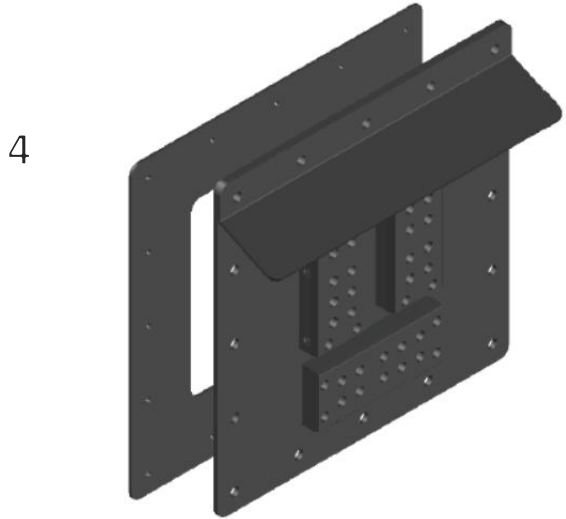

4

Mount the wall plate with a suitable screw over the gasket or gasket compound

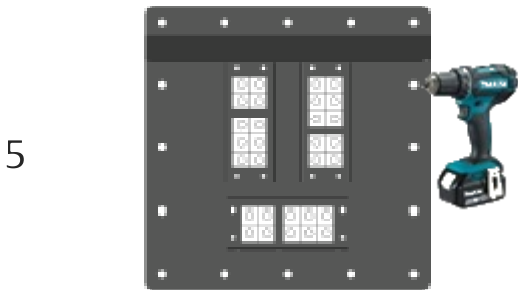

5

Use the holes that create an even distribution between wall and slab. Cross the screws so that there is an even distribution of pressure so that the gasket/gasket compound is evenly distributed.

Note:
It is the installer's responsibility to ensure that the product is correctly installed and weatherproofed.

Appropriate tools



Dense mass || If necessary



Fasteners || Use appropriate fasteners depending on the wall

